

Z-W54 High Performance LED Warning Light Bar

NEW

- ◆ Z-W54-2 and Z-W54-3 Magnetic suction cups install, offer the advantage of being easily removable and repositionable.
- ◆ Z-W54-8 Bracket + screw installation or fixed hook installation.
- ◆ Mainly used on the top of trucks and engineering vehicles etc.



Magnet+Suction Cup

Z-W54-2



Magnet+Suction Cup

Z-W54-3



Z-W54-8




PRODUCT INFORMATION

Lamp Function	Power Consumption	Input Voltage	LED Q'TY	SMD	IP Grade	LED color
Z-W54-2	26w	12-24V	24PCS	3030	IP67	
Z-W54-3	32w	12-24V	32PCS			
Z-W54-8	36w	12-24V	72PCS			

PRODUCT SIZE

[mm]

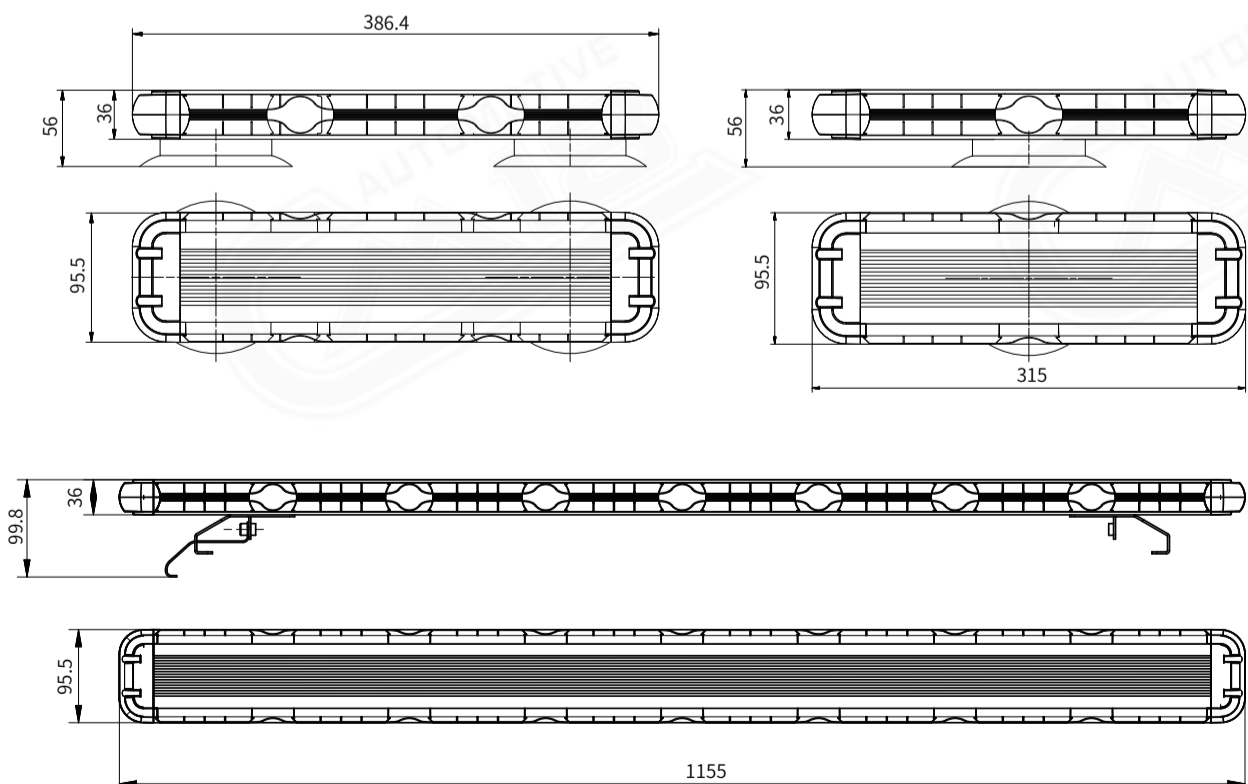

LIGHT



Z-W54-8 Control box



FUNCTIONS DISPLAY



12 Modes (Z-W54-2 Z-W54-3)

- Mode 1: Single Flash
- Mode 2: Double Flash
- Mode 3: Alt. Four Flash Left Half, Four Flash Right Half, Four Flash All
- Mode 4: Alt. Single Flash Left Half, Single Flash Right Half, Four Flash Left Half, Four Flash Right Half and Four Flash All
- Mode 5: Six Flash
- Mode 6: Slow Single Flash
- Mode 7: Double Flash
- Mode 8: Alt. Single Flash Left Half, Single Flash Right Half, Four Flash All
- Mode 9: Cruise (All Modules)
- Mode 10: Left Half and Right Half Four Flash
- Mode 11: Left Half and Right Half Single Flash
- Mode 12: Five Flash



10 Modes (Z-W54-8)

- Mode 1: Single Flash
- Mode 2: Six Flash
- Mode 3: Left Half and Right Half Flash
- Mode 4: Six Flash Alt. Middle and Two Side
- Mode 5: Right Arrow
- Mode 6: Left Arrow
- Mode 7: Arrow from Center to Two Side
- Mode 8: Left Half and Right Half Six Flash
- Mode 9: Alt. Six Flash Left Half, Six Flash Right Half, Six Flash All
- Mode 10: Cruise (Middle 4 Modules and Two ends side Modules)

APPLICATIONS AND INSTALLATION



Z-W54-2 and Z-W54-3 CONNECTION MODE

4 Meters Cable with Cigarette Lighter



Instructions for using cigarette lighter :


1. Insert the cigarette lighter to socket , the power indicator light is on, light bar starts to work.
2. Short press the mode switch to the next mode.
3. Long press the mode switch button for more than 3 seconds, and mode is back to the first flashing mode.

Z-W54-8 control Box Usage:



Instructions for Mode Switch:

1. Black wire connect to Negative pole, red wire connect to Positive pole, Turn on the POWER on the control box, light bar work.
2. Short press the S/W, switch to next mode
3. Long press S/W for 3 seconds, back to the first flashing mode.

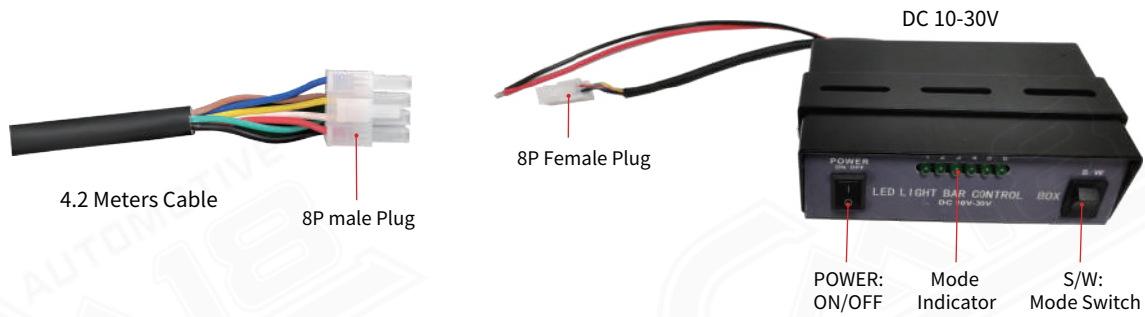

Mode saving instructions (Z-W54-2, Z-W54-3, Z-W54-8):

Once the mode is switched and held on this mode for more than 3 seconds, this flashing mode will be saved as the first flashing mode.

PRODUCT PACKAGING

Z-W54M-2


- Inner box size: 365x147x134 mm
- Master carton size: 640x385x314mm
- Net Weight of Each Lamp: 1kg
- Gross Weight per carton: 11KG
- Quantity of Each Carton: 10 pcs

Z-W54M-3


- Inner box size: 435x147x134mm
- Master carton size: 690x455x314mm
- Net Weight of Each Lamp: 1.3kg
- Gross Weight per carton: 14KG
- Quantity of Each Carton: 10 pcs

Z-W54-8

- Inner box size: 1205x147x114 mm
- Master carton size: 1225x476x167mm
- Net Weight of Each Lamp: 2.9kg
- Gross Weight per carton: 13KG
- Quantity of Each Carton: 4 pcs

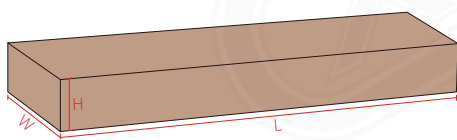

Inner box size

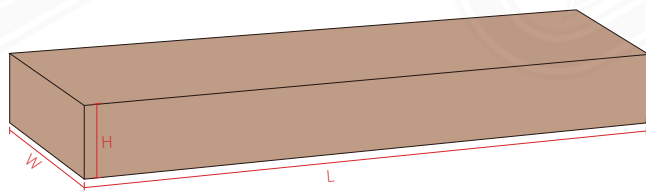

Master carton size